






Ceramic wall faced toilet suite – Clean Flush, Nanoglaze

- Stylish minimalist design, sits flat against wall
- Clean Flush rimless pan design for an efficient, powerful flush
- White vitreous china with nanoglaze surface, easy to clean
- Easy-clean quick release seat with stainless steel pins
- Soft closing seat
- S or P trap
- Back entry or bottom entry plumbing
- 90-180 setout, 150 recommended
- WELS 4 star 4.5/3L water saving flush

ORDER CODE	STO-30-BE	back entry plumbing, flat seat
	STO-30	bottom entry plumbing, flat seat
CISTERN	Suits back entry inlet or bottom entry plumbing. Left and right bottom entry inlet points.	
PAN	Wall faced close coupled with rimless pan design.	
TRAPS	Universal trap, suitable for S or P trap installations.	
SEAT	Quick release seat with stainless steel hinges, soft closing. Flat seat design. Other seat design options are available.	
WELS	4 star rating 4.5/3 litre water saving flush.	
SETOUT	Variable 90-180mm using supplied connector; 150mm recommended.	
FIXING	This is a close coupled toilet suite – the cistern is fixed directly to the pan and does not require wall fixing.	
	Pan may be bedded with cement base or using silicone sealant.	

BACK ENTRY:
Setout position for
½" BSP nipple

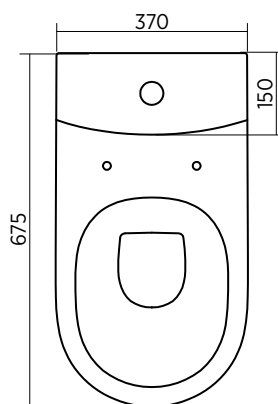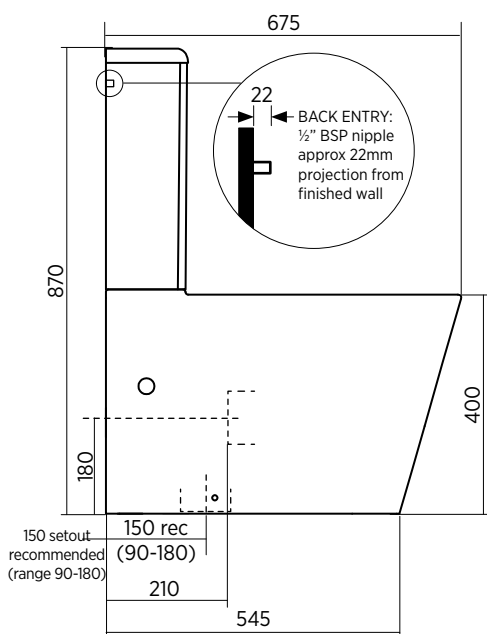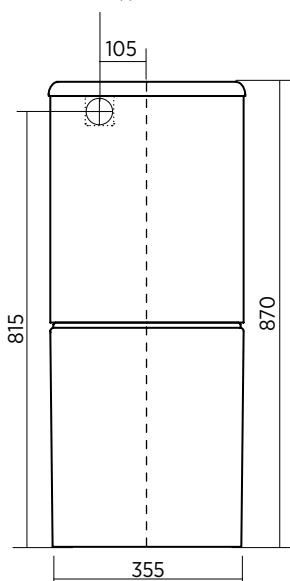

 Rimless Clean Flush pan design – for an efficient, powerful flush

 Nanoglaze surface – ultra-smooth and anti-bacterial, easy to clean

SEIMA

bathroom | kitchen | laundry

seima.com.au

Please note

- Installation shall be in accordance with AS/NZS3500.
- All measurements are in millimetres. Height dimensions are to base of pan. Make allowance for bedding.
- Bedding: Fix pan to floor using a sand cement mixture of 3:1 to a depth of 60mm. Do not use lime or fast-drying cement.
- Bracket fixing: The pan should be bedded with an acetic cured silicone sealant and fixed with the brackets supplied.
- Dimensions are nominal and subject to normal ceramic manufacturing variations. Specifications may vary without notice as part of our continuous improvement practices.
- Specifications may vary without notice as part of our continuous improvement practices.
- Clean with a damp cloth. Do not use abrasive cleaners, liquids or pastes.

DS-STO-30 | v 3.0